


## Hardware Included



Cam & Pin **x 33**



28mm  
Wood Screws **x 4**



Handle Screws **x 4**



14mm  
Wood Screws **x 32**



1 inch nail **x 30**



Door  
Hinges **x 4**



Handle **x 2**



Door Buffer **x 4**



Sticker on  
Cam Caps **x 21**





Sticker on  
Caps **x 8**

## Tools you will need

To put your cabinets together you will need the following tools.

Cordless drill with:

- Number 2 Phillips head bit
- 4.5mm drill bit
- Number 12 countersinking drill bit

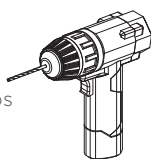


Tape  
Measure



Pencil




Hammer

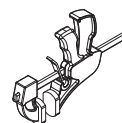


Clamps  
(Quick Release)




Safety  
Gear




Phillips Head  
Screw Driver

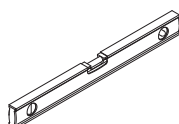


Spirit Level  
(900mm recommended)



Masking  
Tape







65mm  
Wood Screw




Wall Fixing  
(If Necessary)

## Important notice


- Make sure you leave plumbing and electrical work to qualified trades people. Never try this yourself.
- If you have any questions contact us on **1800 666 078** Monday to Friday between 8:00am and 6:00pm AEST or email: [info@flatpax.com.au](mailto:info@flatpax.com.au).

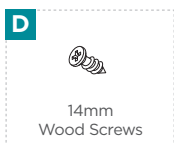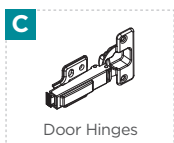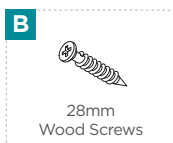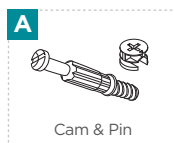


## STEP 1

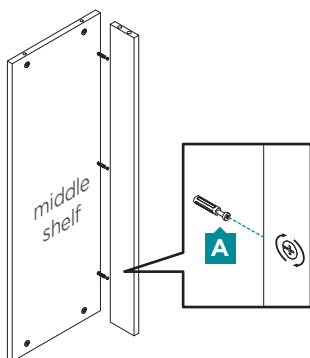

## STEP 2

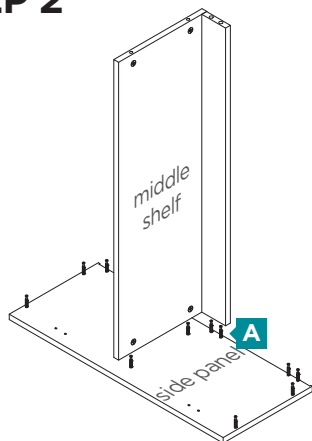


## STEP 3

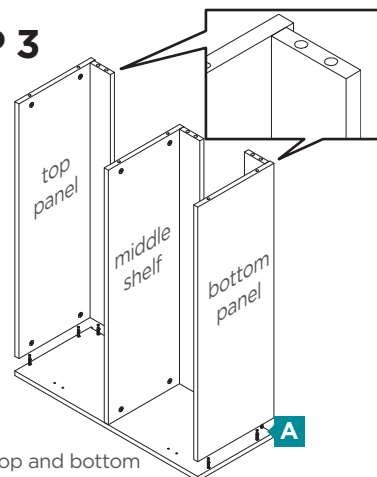


**note:** The top and bottom panel can be identified by the panel protruding past the support rail 5mm.

## STEP 4

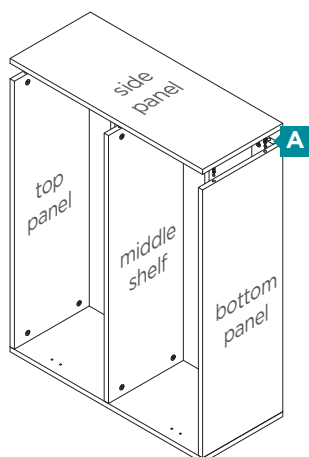


## STEP 5

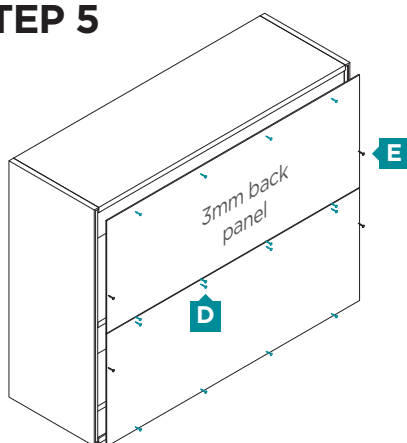


**note:** The white side of the back panel should face inside the cabinet.


## STEP 6

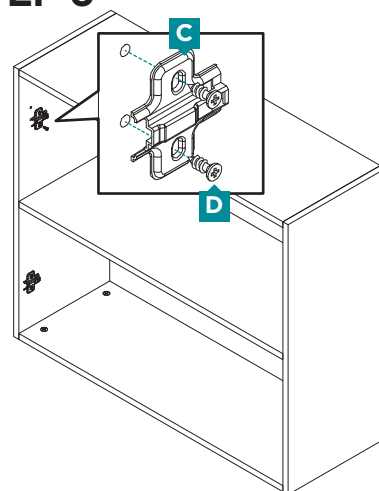


## STEP 7

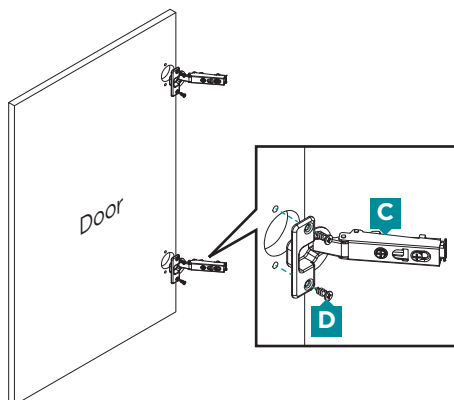


## STEP 8

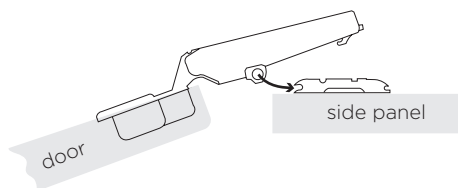


Clip the door onto the hinge plates.

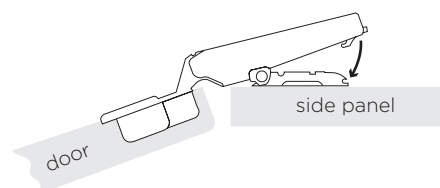

Now push down to clip hinge securely together.

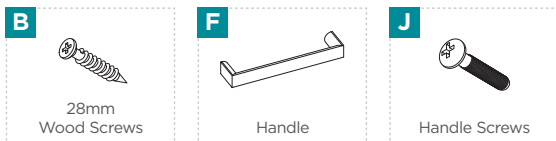


## STEP 8

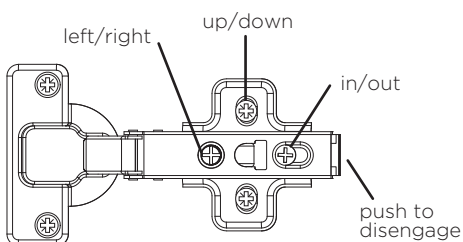


To align doors adjust marked screws.

## STEP 9

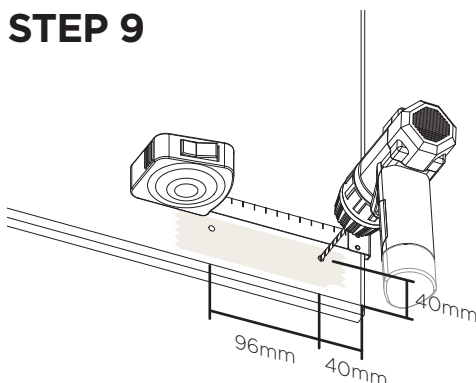


Place masking tape on both sides of the door where holes will be drilled to avoid chipping. Pre-drill using 4.5mm drill bit

## STEP 10

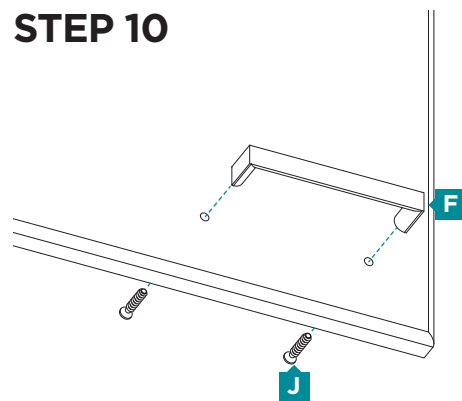


## STEP 11

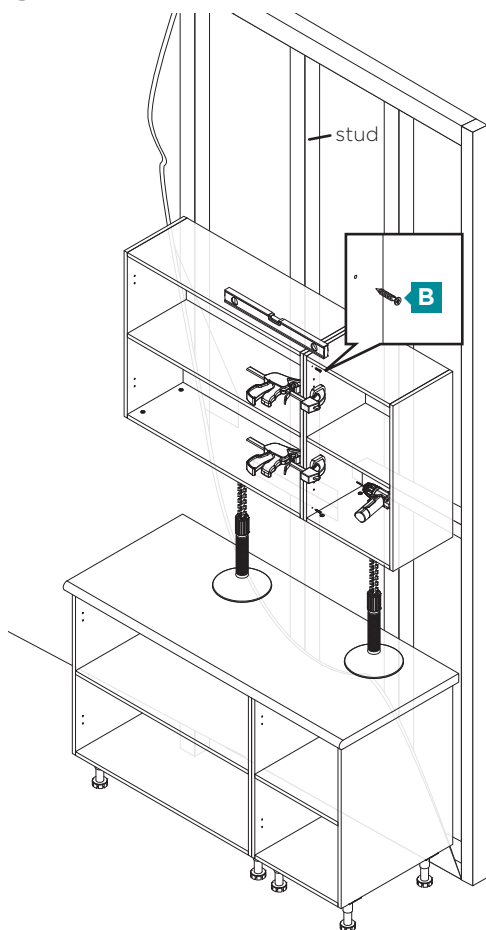


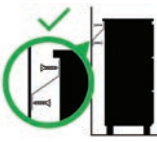
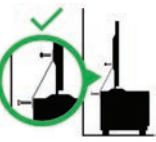
Check cabinets are level then clamp together. Pre-drill using 2mm drill bit and attach cabinets together.

## STEP 12

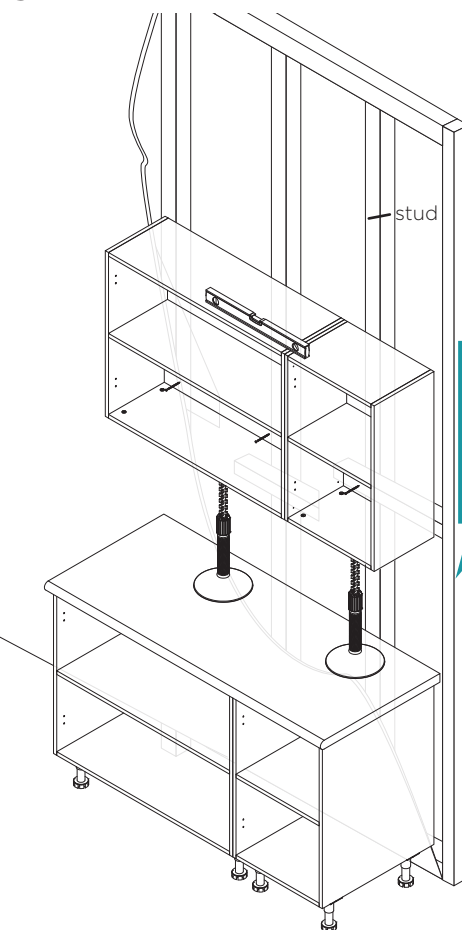

**Caution:** Please ensure all cabinets are screwed into your timber stud wall using a minimum of 65mm timber screws. If attaching to concrete, brick, steel or any other substrates seek advice from your hardware specialist.

**⚠ WARNING**

**Children have died from furniture tipover.**

- ALWAYS secure this furniture with an anchor device.
- NEVER allow children to stand, climb or hang on the drawers, or shelves.
- ALWAYS secure your television with an anchor device
- NEVER open more than one drawer at a time.
- Place heavy items down low
- If you are using this product for the purpose of a clothing storage unit or bookcase, NEVER put a TV on this furniture.